



15306 E. Wellesley Ave
Spokane Valley, WA 99216
Phone: 206-274-5282 / 877-749-5739
Fax: 509-928-3252
www.baketechnpros.com

Lucks R and M Series Oven RESET Procedure

NOTICE:

The following procedure is the Lucks FACTORY RESET that is built into the operating systems of the R and M series oven controllers 1997 and newer. The person(s) performing/following this procedure is wholly responsible for any and all results. This procedure will erase all on-site calibration and adjustments as well as any receipts stored in the controller's memory, Safeway factory receipts will revert back to factory defaults. ***It is HIGHLY suggested that only an experienced bakery technician trained in Lucks ovens perform this procedure.***

Resetting the R or M Series Oven Controller

- 1- Hold in the Temperature UP arrow and the Bake Time DOWN arrow while cycling the power switch off then back on.
- 2- Four zeros should now appear in the bake time window, change these zeros to the reset code of 1001. The xx01 is set with the bake time selection arrows, the 10xx is set with the steam time selection arrows.
- 3- Once the display shows 1001 wait about 15 seconds. The controller resets back to factory shipped configuration, which may solve any erratic actions of the oven.

